


Operation of the AV cabinet equipment in Barkway Village Hall

You will be given a key to the glass-fronted cabinet, under the bar by the entrance to the hall.

Inside, you will find various remote controls for the pieces of equipment.

Those remote controls are:

- A **white** remote control that controls the screen.
- A **Sony** remote control for the Blu-Ray/DVD/CD.
- A **Humax** remote control for the Satellite Receiver.
- A **Denon** remote control for the Amplifier.
- An **Epson** remote control for the projector hanging from the ceiling.

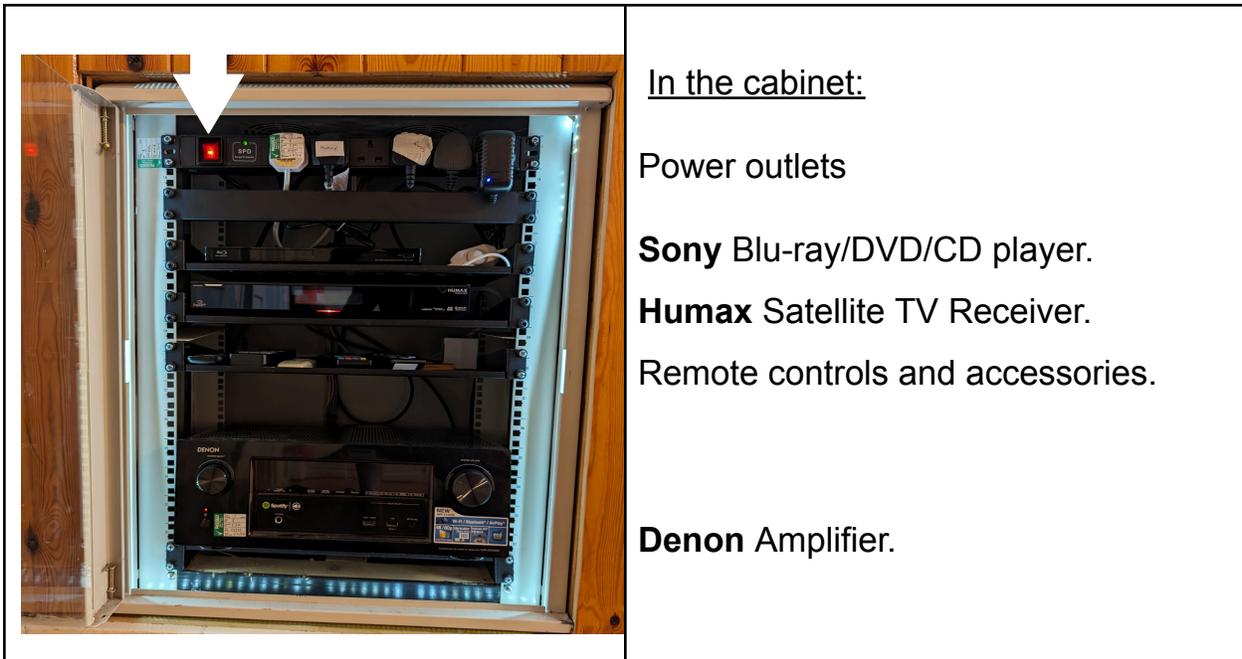

1) **Switch** on the system using the **red** switch in the cabinet, top-left. This also turns on the induction loop hearing aid system.

Grab the **white** and the **Epson** remote controls and walk to the stage

2) Point the **white** screen remote control at a point **behind** the curtains to the **left** (when facing the stage) and press the down arrow. The screen will start to

descend. It will stop automatically.

3) Point the **Epson** Projector remote control at the projector in the ceiling and press On. A blue LED on the projector should come on. Now press **HDMI 1**. Walk back to the AV cabinet.


4) Turn on the **Sony** player (blue/white lights on the box). Put a disc in the drawer or a USB device (FAT32 format required) into the socket. The drawer's eject/close button is top left on the **Sony** remote control.

5) Point the **Denon** remote control at the amplifier, press **Power**(top right). A green LED should be lit on the **Amplifier**. Look towards the lower portion of the remote control, then press and release **Quick Select 2**



This should perform the following tasks:

- Select the input to the amplifier as “Blu-Ray”. This is so you can see and hear any disc playing in the **Sony** player. (Press **CBL/SAT** on the **Denon** remote control to watch and hear the **Humax** satellite TV device)
- Turn up the volume to a healthy level. You can adjust the volume using the controls on the **Denon** remote control.
- Switch sound mode to **PURE**. This will play the sound exactly as it appears on the disc. So if the disc has Surround Sound, you'll hear Surround Sound. If you want to experiment with other sound processing options, then feel free using the coloured buttons on the **Denon** remote control.

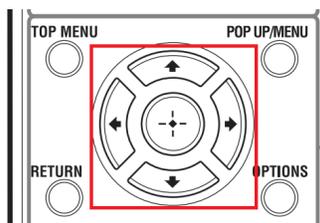

6) Whilst looking at the screen, point the **Sony** remote control at the cabinet and use the cursors and **Enter** button (the button between the arrows), to choose whether to play a disc or USB stick. On pressing **Enter**, the media will start playing.

Use the **Sony** remote control for play/pause/stop/rewind etc.