


# Dishwasher Instructions

1. **Immediately you arrive**, open the door and check **the filter** is firmly connected. Place the **drain plug** in the hole at the top of the filter. (The drain plug is normally stored in the slit to the left. **Please be sure to fit this plug so spoons etc cannot fall down the drain.**)

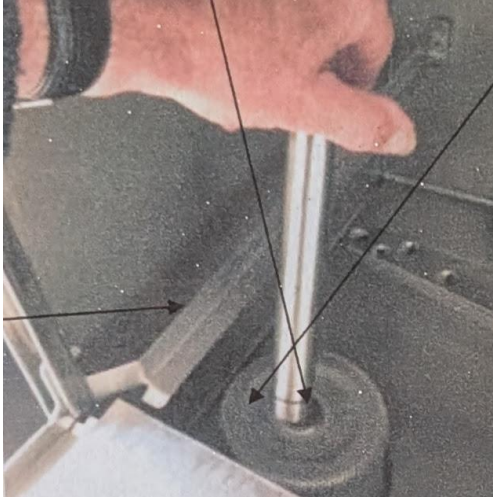

2. Next, close the door and press the **green button**. The machine will now fill up with cold water and the water will heat up in **about 50 minutes** ready for use later. The lights above the buttons will then go out to show that the machine is ready to wash.
3. Fill **one tray** at a time and put in the machine, once the water has heated up. **Don't** try to put more than one tray in at a time and make sure no spoons and forks fall out of the tray were they might get into the drain!
4. Close the door and press the **yellow button**. The washing cycle will now start. It takes about 3 minutes, **slightly longer** if the white button is pressed in.
5. Empty the machine and reload as per 4 above.
6. When you have finished washing up and are ready to leave, open the door, remove the drain plug and put it in the slit on the left hand side. Make sure no spoons and forks have fallen out of the tray onto the bottom of the machine. With the door open, press the **yellow button** and hold it in until the water starts to empty. When the water is emptied, swill a jug of water into the machine, lift out the filter and remove any food waste. Use a cloth to wipe out any water. Press the **yellow button** to stop the pump. It is best to leave the door open when you leave, so no smells build up. Lastly press the **green button** to turn the machine off.